


A. (USA) 1976

Wiring diagram brake lining wear indicator, pressure difference warning system and indicator for brake fluid and parking brake.

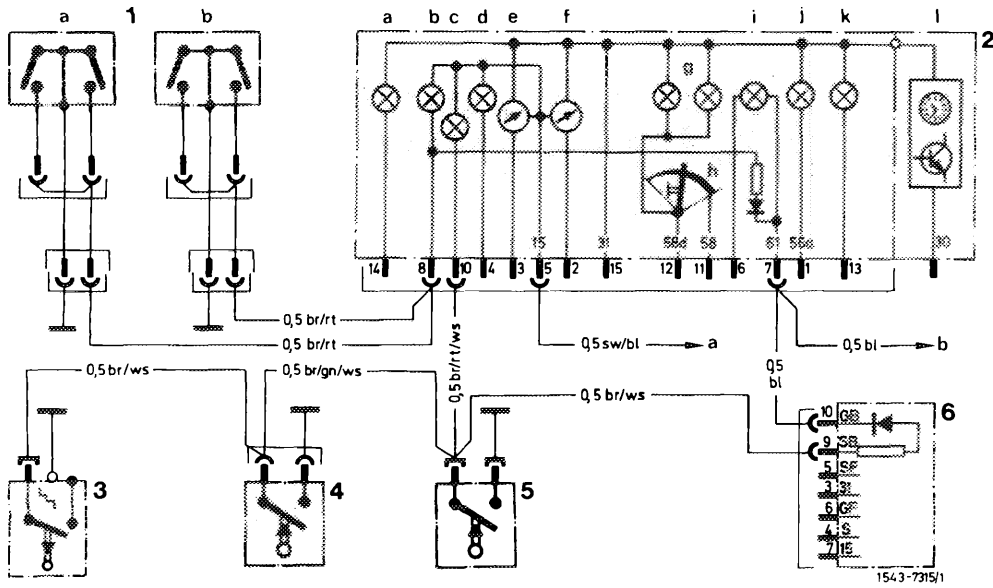

- | | |
|--|--|
| <p>1 Contact sensor
 a Brake linings front left
 b Brake linings front right</p> <p>2 Instrument cluster
 b Checkup brake lining wear indicator
 c Checkup brake fluid, parking brake and pressure difference warning system
 i Charge indicator</p> | <p>3 Switch pressure difference warning system
 4 Switch brake fluid checkup
 5 Switch pedal-operated parking brake checkup</p> <p>6 Warning instrument (seat warning system)
 a Fuse No. 15
 b Alternator terminal 61</p> |
|--|--|