


Removal

- 1 Pull out edge protection (1) at top.
- 2 Unscrew screw (2) on reveal molding (3).
- 3 Push reveal molding (3) toward rear and remove.

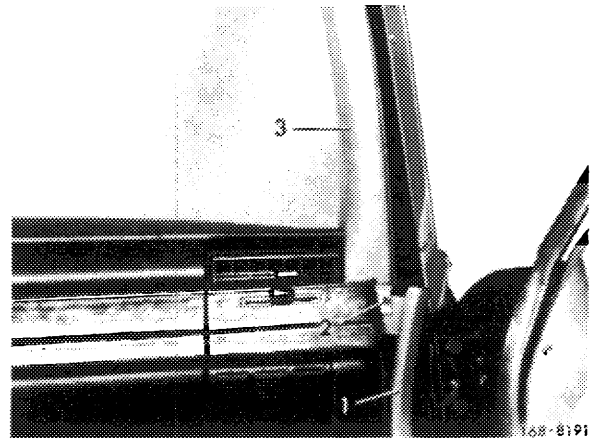

Installation

- 4 For installation proceed vice versa.