

## Removal

- 1 Remove lining on roof frame rear (68–447).
- 2 Remove sun vizor.
- 3 Remove cover on box-type pillar.
- 4 Remove both holding rips (1).

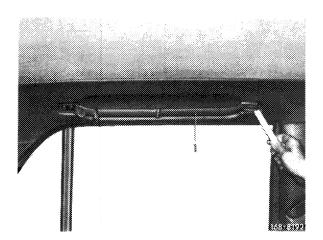

5 Pull lining on roof frame laterally (2) out of reveal molding on windshield top (3) and remove in forward direction.

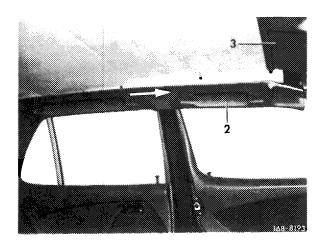

## Installation

6 For installation proceed vice versa.