

Removal

- 1 Unscrew screws (1) on reveal molding rear (2).
- $2\,$ Pull off reveal molding rear (2) at top in outward direction
- ${f 3}$ Lift reveal molding at rear (2) upwards out of clip.

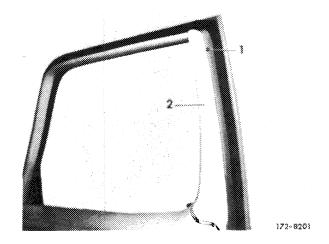

4 Push reveal molding front top (3) out of window frame by means of a plastic wedge.

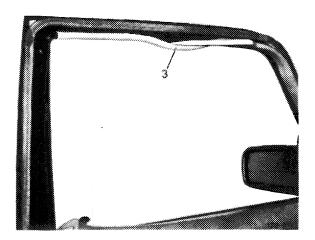

Installation

5 For installation proceed vice versa.