
Removal

- 1 Push covers (1) aside with plastic wedge.
- 2 Pull lower ornamental frame (2) out of clips toward the rear.
- 3 Pull off the two lateral ornamental frames (3).

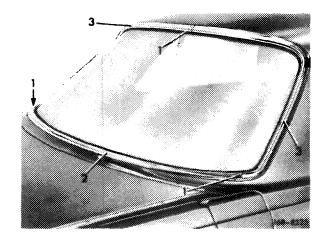

Installation

4 For installation proceed vice versa.