


Color code of vacuum lines for central interlock


Vacuum line	Color code	
	1st version	2nd version
Interlocking line (25)	white	yellow-red
Unlocking line (26)	black	yellow-green

Removal

- 1 Remove door lining.
- 2 Disconnect safety clip (34) of control rod (3).
- 3 Unscrew oval head screws (35) from vacuum element.

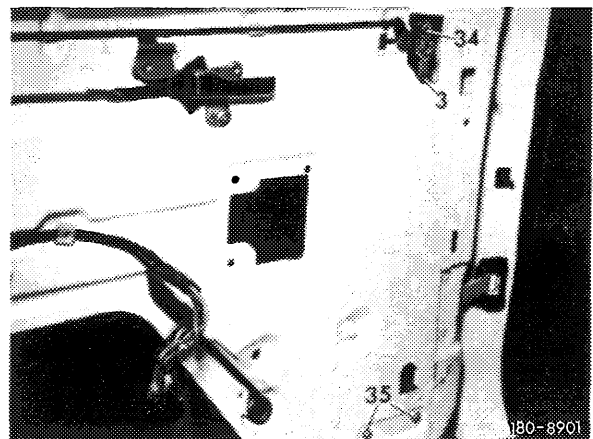


- 4 Remove vacuum element with control rod.
- 5 Pull connections (17) with interlocking line (25) and unlocking line (26) from vacuum element (1).
- 6 Remove lock washer (43) of control rod (3) on vacuum element (1) and pull out control rod.

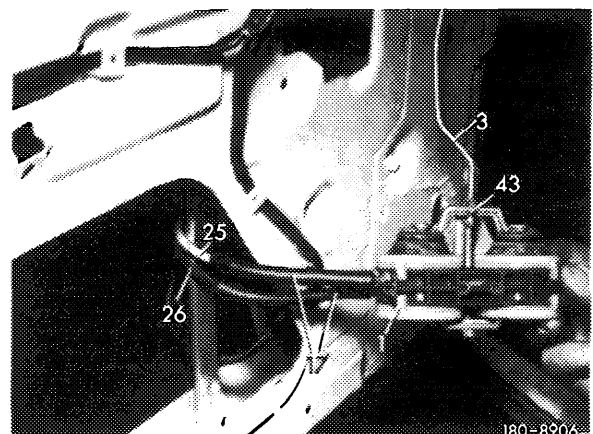

Installation

7 Push control rod (3) into vacuum element (1) up to stop and secure with lock washer (43).

8 Slip interlocking line (25) and unlocking line (26) with connections (17) on vacuum element (1).

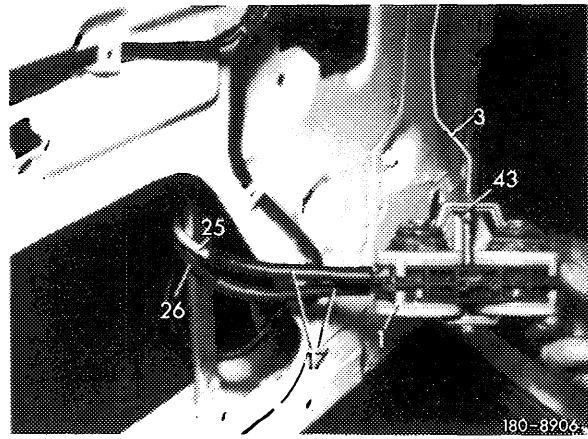

9 Insert vacuum element with control rod into rear door in such a manner that the vacuum connections are facing away from driving direction and tighten with oval head screws (35).

10 Secure control rod (3) with safety clip (34).

11 Install door lining.

