


80–230 Removal and installation of vacuum element of tank filler neck flap

Color code of vacuum lines for central interlock


Vacuum line	Color code	
	1st version	2nd version
Interlocking line (25)	white	yellow-red

Removal

1 Unscrew oval head screw (30) for vacuum element and disconnect vacuum element.

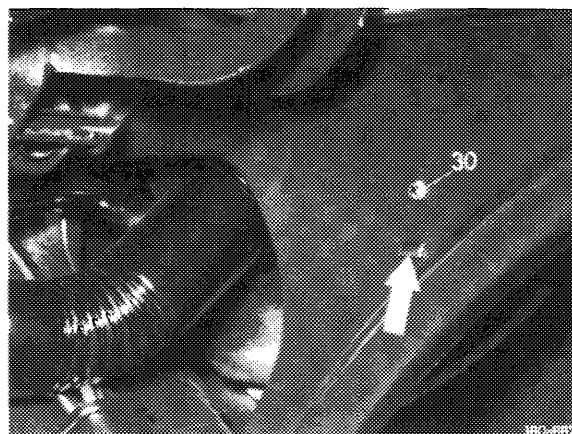


2 Pull vacuum element (4) out of sleeve (19).

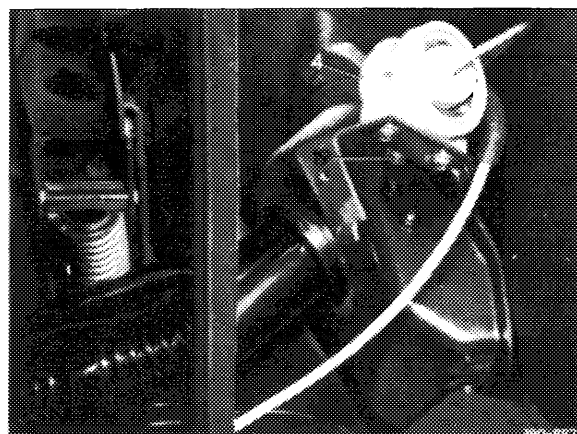

3 Pull connection (17) with interlocking line (25) from vacuum element (4).

4 Pull compression spring (18) from control rod.

5 Unscrew oval head screws from bracket (16) and remove bracket.

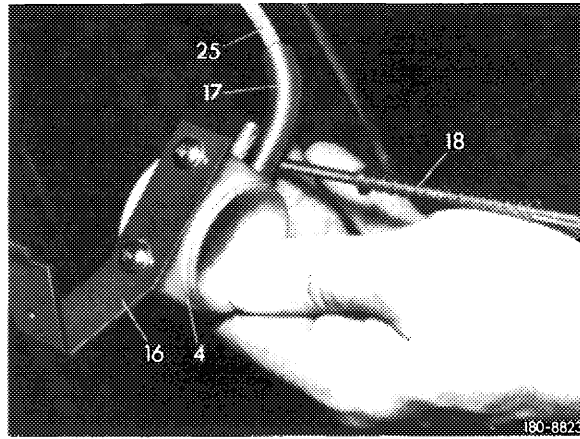


Installation


6 Attach bracket (16) with oval head screws to vacuum element (4).

7 Slip compression spring (18) on control rod.

8 Slip connection (17) with interlocking line (25) on vacuum element (4).

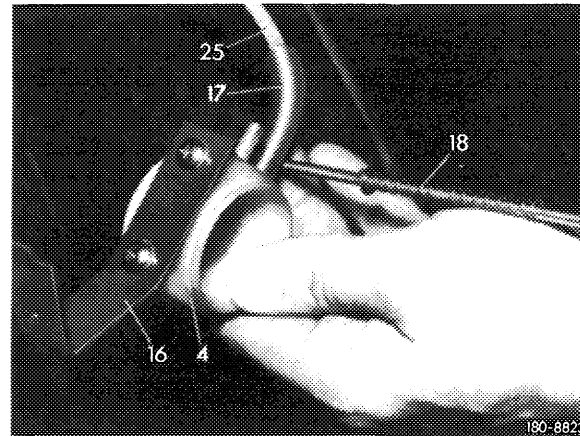

9 Introduce vacuum element (4) into sleeve (19).

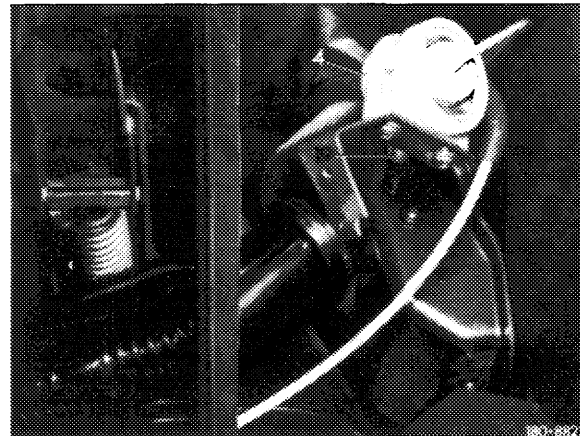

10 Fit vacuum element with bracket and attach with oval head screw (30).

