


**Color code of vacuum lines for central interlock**

Vacuum line	Color code		
	1st version	2nd version	3rd version
Suction line from distributor to vacuum supply tank (23)	yellow	grey-yellow	yellow-grey

**Removal**

---


1 Unscrew hex. screws (61) of partition (60) in trunk and remove partition.

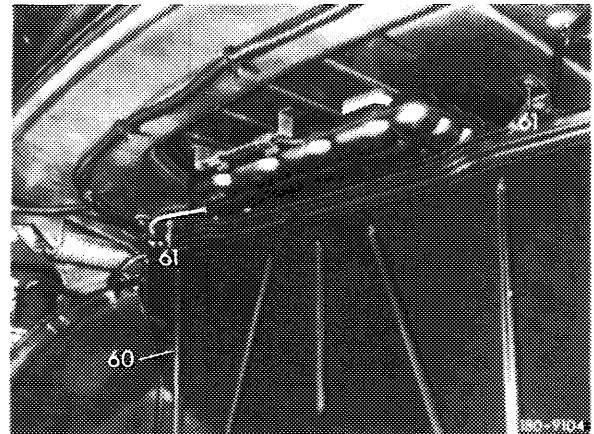

2 Pull clips (14) from vacuum supply tank (6).

3 Pull vacuum line (23) from seal (9).

4 Remove vacuum supply tank (6) from bracket.

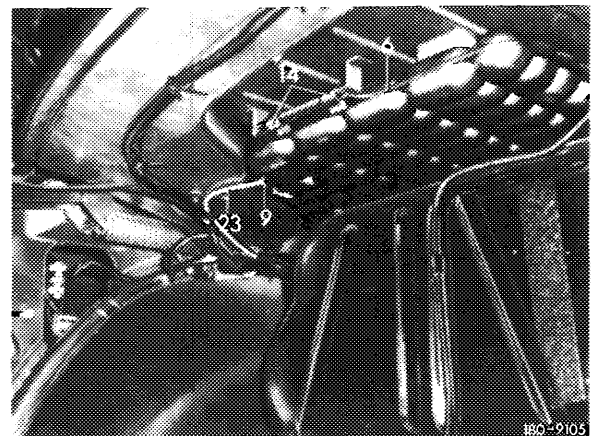


## Installation

---

5 Insert new seal (9) into vacuum supply tank (6).

6 Slip vacuum line (23) into seal (9).

7 Insert vacuum supply tank (6) into rear bracket and attach with clips (14) at front.

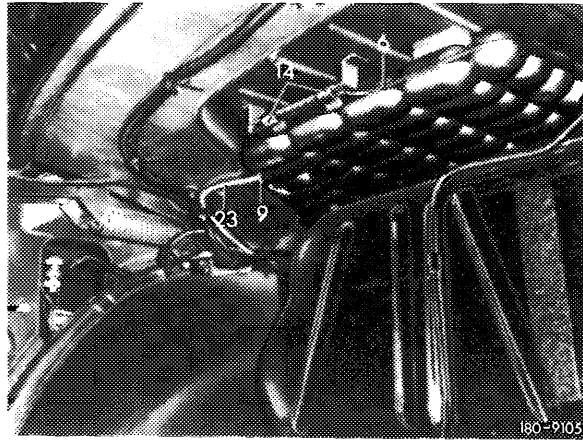

8 Insert partition (60) and attach with hex. screws (61).

