

Federal and California version model year 1977/78/79

Removal

- 1 Compress hose clip on contoured hose (arrow) with combination pliers and push approx. 2 cm to the rear.
- 2 Loosen clamping screws (1, 2 and 3) and unscrew.

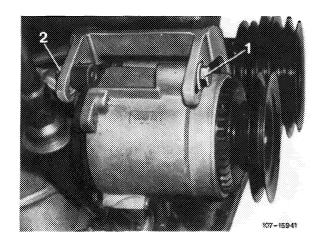

3 Remove V-belt and contoured hose, remove air pump.

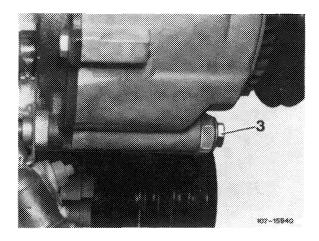

Installation

4 For installation proceed vice versa.

Note: The V-belt is correctly tensioned if it can be resiliently pushed down under energetic thumb pressure.