



B. Model 116

Removal


1 Unscrew fastening screws (1) of cover. Slide cover inwards until rubber lugs are disconnected from guide (2) and remove.

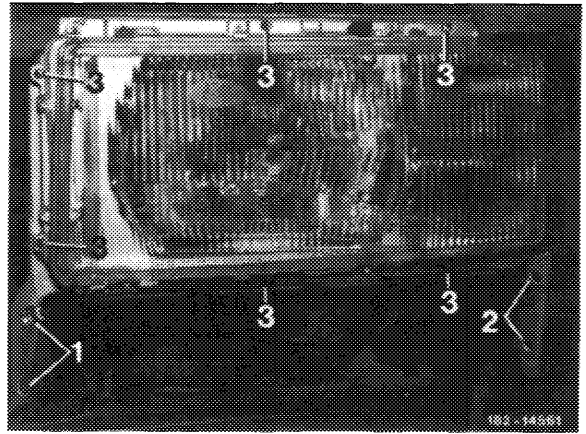


2 Unscrew knurled nut of turnsignal (flasher).

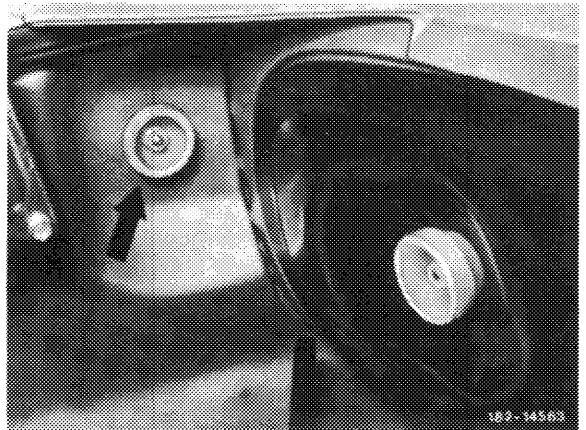

3 Push turnsignal (flasher) forward and remove.

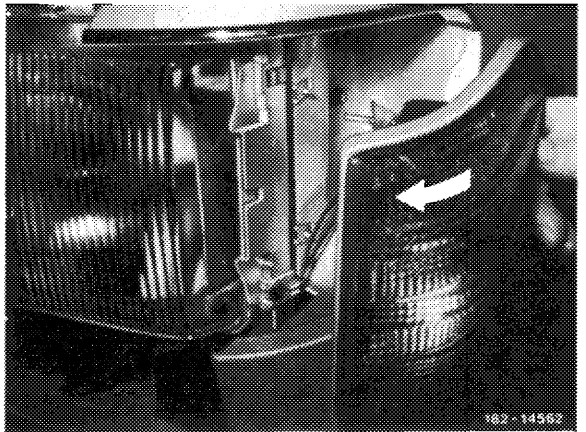

4 Unscrew fastening screws (3). Remove lamp unit and pull off couplers of electrical connections.

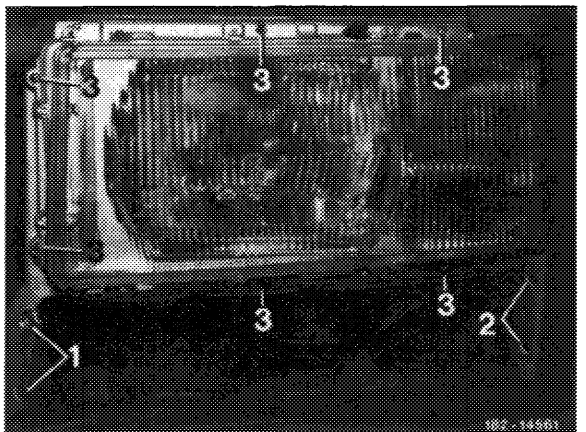

Installation

5 For installation proceed vice versa.


Cable layout of couplers

Left

- 1 brown
- 2 black/white
- 3 grey/green
- 4 grey/black


Right

- brown
- black/green
- grey/green
- grey/red

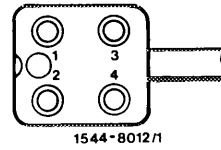

Lamp unit (USA)

- 1 High beam
- 2 Low beam
- 3 Turnsignal lamp (flasher)
- 4 Clearance/standing lamp and side marker
- 5 Fog lamp
- 6 Covering disk

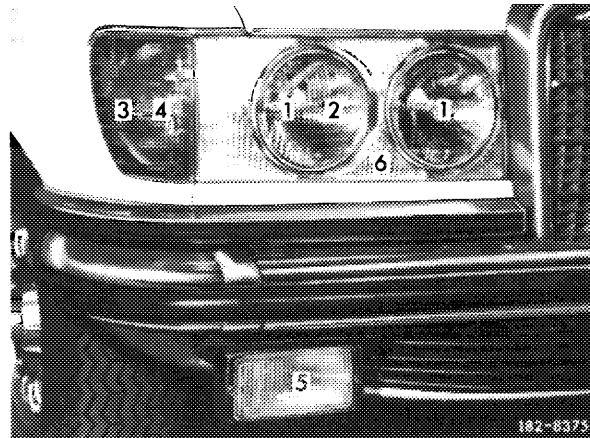

- 1 Adjusting screw (height)
- 2 Adjusting screw (side)

