


A. Model 114, 115

Removal

- 1 Remove instrument cluster (54-250).
- 2 Unscrew both fastening nuts (21) and remove time clock.

Installation

- 3 For installation proceed vice versa. Make sure that contacts of time clock are inserted in contact spring.

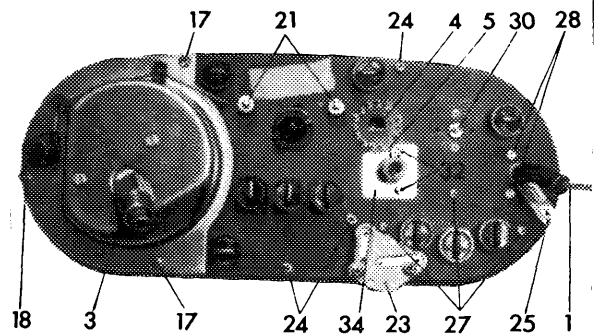


R-3502

B. Model 116

Removal

- 1 Remove instrument cluster (54-250).
- 2 Remove tachometer (54-253).
- 3 Unscrew fastening screws (2) and remove time clock.

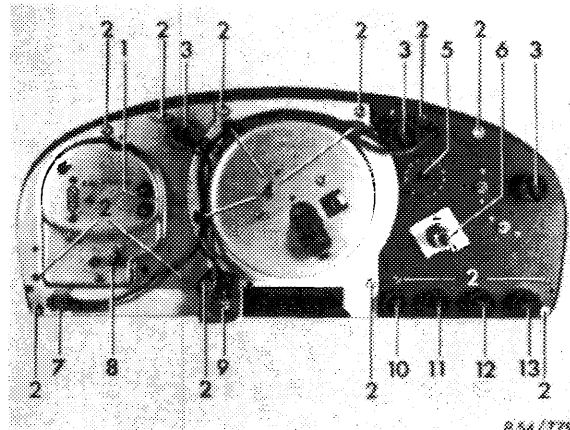


R 54/7793

Installation

- 4 For installation proceed vice versa.

- Time clock and revolution counter removed
- 1 Base plate
 - 2 Electrical connection revolution counter
 - 3 Electrical connection time clock

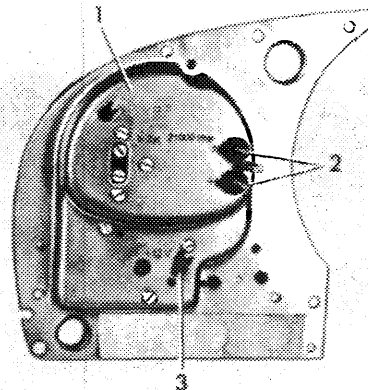

R 54/7793